

# Club Car Precedent Brush Guard Installation Instructions

Black- Part# 7235

Gunmetal- Part# 7067

Stainless- Part# 7255



## Parts List

Brush Guard-1

5/16 x 4 Bolts-2

3/8 Flatwashers-10


5/16 Locknuts-2

M10-1.5 Locknuts-2



*Always wear appropriate  
eye protection!*

1. Remove the stock bolts from the front bumper.
2. Using the supplied 5/16 x 4 bolts, washers, & locknuts reinstall the front bumper and brush guard to the cart as shown in Figure 1. **NOTE-** some models may need the stock holes slightly enlarged. **NOTE-** To level the brush guard use three of the supplied washers between the frame and brush guard on each side of the cart as shown in **Figure 1**.
3. Using the supplied M10-1.5 locknuts bolt the brush guard to the stock rear bolt of the front frame as shown in Figure 1.
4. Securely tighten all bolts.

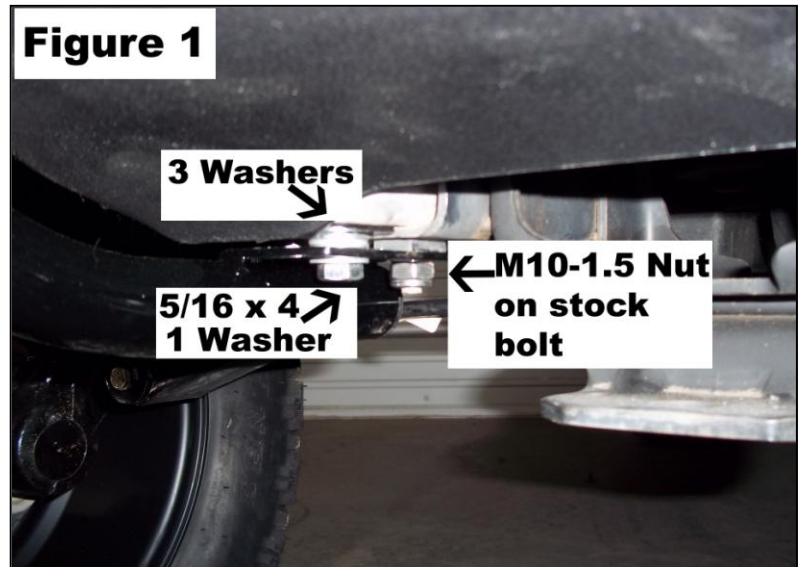

866-405-2537

[www.jakesliftkits.com](http://www.jakesliftkits.com)